

Belt Direction Quick Guide

PULL configuration

PUSH configuration

STANDARD CONFIGURATION

1




R - Right Side Drive Shaft

2



L - Left Side Drive Shaft


3

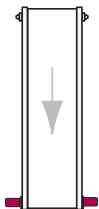

D - Dual Drive Shaft

Arrows show direction of belt travel

4

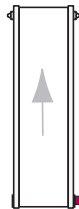


R - Right Side Drive Shaft

5



L - Left Side Drive Shaft

6

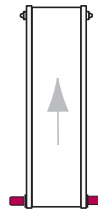

D - Dual Drive Shaft

Arrows show direction of belt travel

PULL configurations: Full load capacity is delivered
Belt is pulled toward the gearmotor

PUSH configurations: Load capacity is reduced by 50% or more
Belt is pushed away from gearmotor